


Basic Stamp Holder

Andrew Hilton
Hilton Handcraft of the Ozarks
www.HiltonHandcraft.com

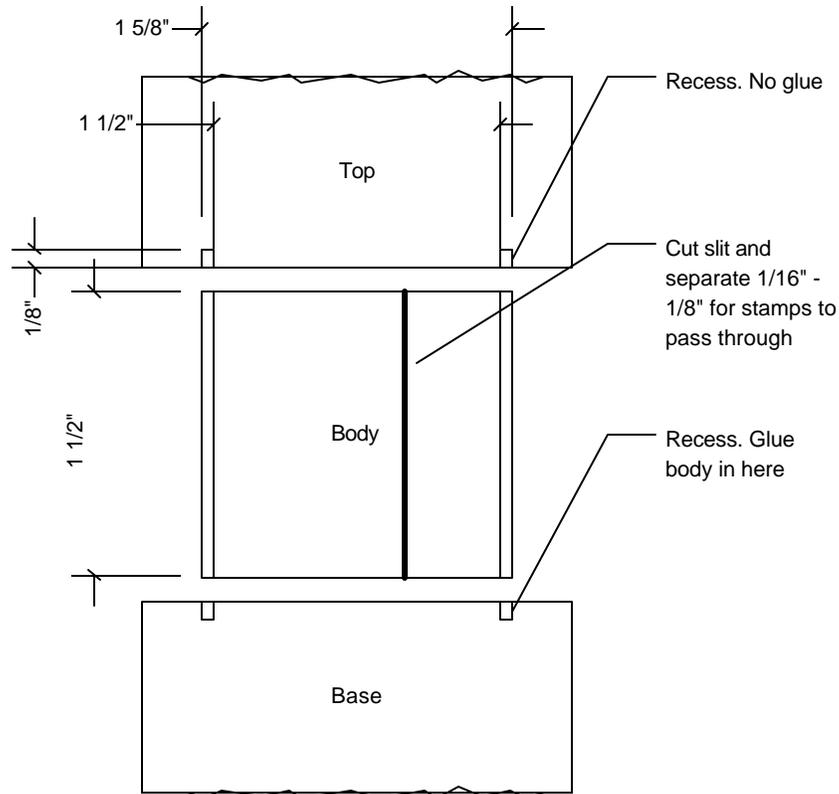

Instructions

- Turn Body round about 1 3/4" or larger.
- Drill 1 1/2" hole in Body at least 1 1/2" long
- Support end of Body with Tailstock Cone.
 - Turn Body down to thickness of 1/8"
 - Sand / Finish
 - Part off
 - Cut slit opening
- Turn Base round about 2 1/2"
- Face off Base end to slightly concave
- Measure Body walls with caliper with slit slightly open
- Transfer to Base. Cut groove / recess to match about 1/8" deep
 - Turn bottom as desired (not too tall !)
 - Sand / Finish
 - Part Off
 - Glue Body into Base
- Turn Top round to about 2 1/2"
- Face off Top end to slightly concave or as desired
- Measure Body walls with caliper as it now sits on base
- Transfer to Top. Cut groove / recess to match about 1/8" deep
 - Turn Top as desired
 - Sand / Finish
 - Part Off
 - Do NOT glue Body to Top